



RCC				NOTE: When ordering spare parts. Please state the part name and part number.							
Item	Part No	Description	Q'ty	Item	Part No	Description	Q'ty	Item	Part No	Description	Q'ty
001	XM10575	CAP	1	037	XM10624	RIGHT COIL GUIDE (I-19 series)	1	526	XM10209	HEX.SOC.HD.LESS.	1
002	XM10576	PISTON	1	037	XM10625	RIGHT COIL GUIDE (I-22-GR(2.3mm))	1	527	XM10210	HEX.SOC.HD.BOLT	1
003	XM10577	PISTON ROD	1	037	XM10626	RIGHT COIL GUIDE (T series)	1	528	XM10675	SPRING PIN	2
004	XM10149	BLOCK	1	037	XM10627	RIGHT COIL GUIDE (S series)	1	529	XM10202	SPRING PIN	4
005	XM10150	SPRING	1	037	XM10628	RIGHT COIL GUIDE (S-12 series)	1	530	XM10249	HEX.SOC.HD.BOLT	6
006	XM10151	COLLAR	1	038	XM10629	LEFT COIL GUIDE (I-19 series)	1	531	XM10047	LOCK NUT	6
007	XM10581	BODY UNIT	1	038	XM10630	LEFT COIL GUIDE (I-22-GR(2.3mm))	1	532	XM10213	HEX.SOC.FLAT COUNTER	2
008	XM10130	AIR PLUG	1	038	XM10631	LEFT COIL GUIDE (T series)	1	532	XM10680	HEX.SOC.FLAT COUNTER	2
008	XM10131	AIR PLUG	1	038	XM10632	LEFT COIL GUIDE (S-19 series)	1	533	XM10214	PIN	4
008	XM10132	AIR PLUG	1	038	XM10633	LEFT COIL GUIDE (S-12 series)	1	534	XM10215	PIN	2
009	XM10153	BLOCK	1	039	XM10634	MAGAZINE	1	537	XM10216	SPRING PIN	2
010	XM10154	SPRING	1	039	XM10635	MAGAZINE (I-GR series)	1	538	XM10684	SPRING PIN	3
011	XM10155	TRIGGER	1	040	XM10636	SHAFT	1	540	XM10122	HEX.SOC.FLAT COUNTER	1
012	XM10156	SPRING	1	041	XM10637	WASHER (T = 1.35mm,I,GR series)	1	541	XM10686	HEX.SOC.FLAT COUNTER	4
013	XM10961	ROD	1	041	XM10638	WASHER (T =1.05mm,T,IRR series)	1	542	XM10687	ROUND HD.SCREW	4
014	XM10158	TRIGGER'S CONTROL	1	041	XM10639	WASHER (T = 1.0mm,S series)	1	542	XM10688	HEX.SOC.HD.BOLT	6
015	XM10159	SPRING	1	042	XM10640	SHAFT	1	543	XM10225	E-RING	2
016	XM10160	VALVE	1	043	XM10641	LEVER	1	544	XM10690	SPRING PIN	1
017	XM10161	TUBE	1	044	XM10642	COVER	1	545	XM10061	C-RING	1
018	XM10162	ADJUSTING ROD	1	045	XM10643	PLATE	2	546	XM10225	E-RING	1
019	XM10163	ADJUSTING PLATE	1	047	XM10644	WASHER	1	548	XM10228	PLASTIC PIN	1
020	XM10596	FRONT PLATE	1	048	XM10189	SILENCER	1	549	XM10694	WAVE WASHER	1
021	XM10165	RIGHT TEETH (I series , T series)	1	050	XM10646	WASHER	1	551	XM10201	HEX.SOC.FLAT COUNTER	3
022	XM10166	LEFT TEETH (I series , T series)	1	051	XM10185	WASHER	1				
021	XM10599	RIGHT TEETH (I-22-GR)	1	052	XM10186	COVER	1				
022	XM10600	LEFT TEETH (I-22-GR)	1	053	XM10649	SHAFT	1				
021	XM10601	RIGHT TEETH (S series)	1	501	XM10188	HEX.SOC.HD.BOLT	4				
022	XM10601	LEFT TEETH (S series)	1	503	XM10651	O-RING	1				
021	XM10603	TEETH (S-12 series)	1	504	XM10190	HEX.NUT	1				
022	XM10603	TEETH (S-12 series)	1	505	XM10191	WASHER	1				
023	XM10167	TEETH SEAT	2	506	XM10059	O-RING	1				
024	XM10168	PLATE	2	507	XM10655	O-RING	1				
025	XM10607	DRIVER (S series)	1	508	XM10194	WASHER	1				
025	XM10608	DRIVER (I-RRseries , T series)	1	510	XM10114	HEX.SOC.HD.BOLT	1				
025	XM10609	DRIVER (S-12 series)	1	511	XM10196	SPRING PIN	1				
027	XM10610	DRIVER GUIDE UNIT (I-RR(1.9mm), T series)	1	512	XM10659	O-RING	1				
027	XM10611	DRIVER GUIDE UNIT (I-GR(2.3mm) series)	1	513	XM10197	TRIGGER SCREW	2				
027	XM10612	DRIVER GUIDE UNIT (S series)	1	514	XM10198	SPRING WASHER	2				
029	XM10613	ANVIL (S series)	1	515	XM10199	SPRING PIN	1				
029	XM10614	ANVIL (I-22GR.), T series)	1	516	XM10200	OUTSIDE TEETH WASHER	1				
030	XM10615	PUSHER (I-RR series , T series)	1	517	XM10201	HEX.SOC.HD.BOLT	1				
030	XM10616	PUSHER (S series)	1	518	XM10202	SPRING PIN	1				
030	XM10617	PUSHER (I-GR series)	1	519	XM10203	O-RING	1				
031	XM10618	SPRING	2	520	XM10059	O-RING	2				
032	XM10619	ANVIL CAP	1	521	XM10204	O-RING	1				
033	XM10620	SPRING	1	522	XM10205	O-RING	1				
034	XM10621	PLATE	1	523	XM10206	O-RING	1				
035	XM10622	TOP GUIDE	1	524	XM10207	O-RING	1				
036	XM10623	LEAF SPRING	1	525	XM10672	ROD	2				