

EVERWIN

TOUGHER FASTER SMARTER

Pneumatic Stapler

SN41 Series

OPERATIONS and MAINTENANCE MANUAL

The tool is designed for high-speed and high-volume fastening. This tool delivers efficient and dependable service when used correctly with care. As with any fine power tool, the manufacturer's instructions must be followed for best performance.

Please study this manual before operating the tool and understand the safety warnings and cautions. The instructions on installation, operation, and maintenance should be read carefully, and the manuals kept available for reference.

NOTE

Additional safety measures may be required because of your particular application of the tool. Contact your EVERWIN representative or distributor with any questions concerning the tool and its use.

Everwin Pneumatic Corp.,
No.7, Wugong 7th Road, Wufeng District, Taichung City, 413, Taiwan



INDEX

1-YEAR LIMITED WARRANTY	3
CE DECLARATION OF CONFORMITY	4
SAFETY INSTRUCTIONS	5
GENERAL SAFETY INSTRUCTION	7
SPECIFICATIONS AND TECHNICAL DATA	9
OPERATION : TRIGGER SELECTION	11
OPERATION : AIR SUPPLY AND CONNECTIONS (fittings, hoses, filters, air consumption, regulators, supply source)	12
OPERATION : LUBRICATION	13
OPERATION : FASTENER LOADING	14
OPERATION : TOOL OPERATION SYSTEM	15
OPERATION : TOOL OPERATION CHECK	16
OPERATION : TOOL-SPECIFIC FEATURES	17
MAINTAINING THE PNEUMATIC TOOL	18
TROUBLE SHOOTING / REPAIRS	19

! WARNING:

BEFORE OPERATING THIS TOOL, ALL OPERATORS SHOULD READ AND STUDY THIS MANUAL TO UNDERSTAND AND FOLLOW THE SAFETY WARNINGS AND INSTRUCTIONS. KEEP THESE INSTRUCTIONS WITH THE TOOL FOR FUTURE REFERENCE.



REV October, 11, 2022
107596

(U.S. and Canada Only)

EVERWIN products are designed and manufactured to the highest standards of both material and workmanship. EVERWIN warrants responsibility to the original retail purchaser that the product purchased was free from defect in material and workmanship, and agrees to repair or replace at EVERWIN's option any defective EVERWIN pneumatic stapler or nailer for a period of one year, subject to the exclusions and limitations described hereunder. To honor a warranty claim, EVERWIN and its authorized distributors need proof of purchase, may request the damaged tool, the serial number of the damaged tool, photos/videos of the defect for test and evaluation to determine whether the damaged tool is within warranty conditions; purchasers' cooperation in this regard will expedite the claim process and help EVERWIN's continuous efforts in quality improvement.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. EVERWIN SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.

WARRANTY EXCLUSIONS

The following warranty exclusions apply :

Normal wear parts are not covered by this warranty. Examples of normal wear parts include; O-rings and seals, driver blades, bumpers, pistons and piston rings.

Failure due to normal wear, neglect, abuse, misuse, misapplication, accidents, over-pressure usage, improper storage, shipping damages, improper maintenance, operation not within the operation manual's specification etc. are not covered by this warranty.

Labor charges, loss, repairs from improper maintenance and/or usage of non-EVERWIN parts are not covered by this warranty.

This warranty does not apply to production or industrial tools as defined by EVERWIN; industrial or production tools are covered on the following grounds.

GROUND FOR INDUSTRIAL / PRODUCTION TOOL COVERAGE

For high production industrial tools, coverage is limited to 90 days due to high volume usage; warranty on production tools cannot be guaranteed due to unpredictable circumstances. Tools are subjected to abuse such as hammering or usage of adjustment tools, especially true in loan tool programs. Upon receiving a report, EVERWIN and its authorized distributor may request the damaged tool, serial number of the damaged tool (as a gauge for the tool's age), and photos/videos of the defect for test and evaluation to find root causes. EVERWIN's analyst will judge the issuance of defective parts and will.

NOTE

All warranty services will be carried out by EVERWIN authorized repair centers, please contact: sales@everwinpneumatic.com for the location most convenient for you.

CE Declaration of conformity **ENGLISH**
 EVERWIN PNEUMATIC CORP. declares that the product as described in attached documentation is in conformity with the Machinery Directive 2006/42/EC and the European standard EN ISO 11148-13:2018.

CE Dichiarazione di conformità **ITALIANO**
 EVERWIN PNEUMATIC CORP. dichiara, assumendo la piena responsabilità, che questa fissatrice è conforme alla Direttive Europee 2006/42/EC e alla norma armonizzata EN ISO 11148-13:2018.

CE Konformitätserklärung **DEUTSCH**
 EVERWIN PNEUMATIC CORP. erklärt hiermit in alleiniger Verantwortung das dieses Gerät übereinstimmt mit den Europäischen Richtlinien 2006/42/EC und den Europäischen Norm EN ISO 11148-13:2018.

CE Déclaration de conformité **FRANCAIS**
 EVERWIN PNEUMATIC CORP. déclare et prend sur soi toute la responsabilité de cette déclaration, que le produit est en conformité avec les Directives Européennes 2006/42/EC et avec la norme harmonisée EN ISO 11148-13:2018.

CE konformiteitsverklaring **NEDERLANDS**
 EVERWIN PNEUMATIC CORP. verklaart hierbij onder eigen verant woordelijkheid dat deze machine in overeenstemming is met de Europese Richtlijnen 2006/42/EC en de Europese norm EN ISO 11148-13:2018.

CE Declaracion de conformidad **ESPAÑOL**
 EVERWIN PNEUMATIC CORP. declaramos bajo nuestra sola responsabilidad que este producto esta en conformidad con las Directivas Europeas 2006/42/EC y con la normativa EN ISO 11148-13:2018.

Overensstemmelseserklæring / CE Deklaration **DANSK**
 EVERWIN PNEUMATIC CORP. erklærer herved, at produktet er i overensstemmelse med nedenstående normer eller normative dokumenter 2006/42/EC i henhold til bestemmelserne i EU's direktiv EN ISO 11148-13:2018.

Överstämmelesförklaring / CE Deklaration **SVENSK**
 EVERWIN PNEUMATIC CORP. förklarar härmed att produkten överensstämmer med följande normer och direktiv 2006/42/EC och SS-EN ISO 11148-13:2018.

SAMSVARERKLÆRING / CE Deklaration **NORSK**
 EVERWIN PNEUMATIC CORP. erklærer herved att produktet er i samsvar med følgende normer og direktiv 2006/42 EC og NS-EN ISO 11148-13:2018.

Todistus CE standardinmukaisuudesta **FINSK**
 EVERWIN PNEUMATIC CORP. vakuuttaa täten tuotteen vastaavan seuraavla standardeja ja direktiivejä: 2006/42/EC ja EN ISO 11148-13:2018.


Deklaracja zgodności CE **POLSKIE**
 EVERWIN PNEUMATIC CORP. oświadcza, że produkty opisane w załączonej dokumentacji spełniają wymogi Dyrektywy Maszynowej 2006/42/EC oraz Europejskiej normy EN ISO 11148-13:2018.

Machine Type : SN41S4, SN41S5, SN41S5-D, SN412S2, SN41S2, SN41S2-R, SN41S4A, SN41S5A, SN41S5A-D, SN412S2A, SN41S2A, SN41S2A-R

Machine Name : Pneumatic Fastener Driving Tool

Place of Issue : No. 7, Wugong 7th Rd., Wufeng Dist., Taichung City 41353, Taiwan.

Date of Issue : October, 11, 2022

Signature of Issuer : 
 Hung-Ming Chuang
 General Manager



TO AVOID SEVERE PERSONAL INJURY OR PROPERTY DAMAGE

Before operating this tool, all operators should read and study this manual to understand and follow the safety warnings and instructions. Failure to follow warnings could result in death or serious injury. Keep these instructions with the tool for future reference.



Eye Protection

Which conforms to ANSI/ CE specifications and provides protection against flying particles both from the FRONT and SIDE should ALWAYS be worn by the operator and others in the work area when connecting to air supply, loading, operating, or servicing this tool. Eye protection is required to guard against flying fasteners and debris, which could cause severe eye injury. The employer and/or user must ensure that proper eye protection is worn. Eye protection equipment must conform to the requirements of the ANSI Z87.1 and 89/686/EEC, and provide both frontal and side protection.

NOTE

Non-side shielded spectacles and face shields alone do not provide adequate protection.



CAUTION

Additional Safety Protection is required in some environments. For example, the working area may include exposure to noise level which can lead to hearing damage. The employer and user must ensure that any necessary hearing protection is provided and used by the operator and others in the work area. Some environments will require the use of head protection equipment. When required, the employer and user must ensure that head protection conforming to ANSI Z89.1/ CE is used.



AIR SUPPLY AND CONNECTIONS

Do not use oxygen, combustible gases, or bottled gases as a power source for this tool as tool may explode possibly causing injury.



Do not use supply sources which can potentially exceed 14bar (200 PSI) as the tool may burst, possibly causing injury.



The connector on the tool must not hold pressure when air supply is disconnected. If a wrong fitting is used, the tool can remain charged with air after disconnecting and thus will be able to drive a fastener even after the air line is disconnected, possibly causing injury. Do not pull trigger or depress contact arm while connected to the air supply as the tool may cycle, possibly causing injury.

Always disconnect air supply: 1.) Before making adjustments; 2.) When servicing the tool; 3.) When clearing a jam; 4.) When tool is not in use; 5.) When moving to a different work area; otherwise, accidental actuation may occur, possibly causing injury.



FASTENER LOADING

When loading the tool: 1.) Never place a hand or any part of body in the fastener discharge area of the tool; 2.) Never point the tool at anyone; 3.) Do not pull the trigger or depress the trip as accidental actuation may occur, causing injury.



OPERATION

Always handle the tool with care: 1.) Never engage in horseplay; 2.) Only pull the trigger when the nose is directed toward the work piece; 3.) Keep a safe distance from other while the tool while tool is in operation as accidental actuation may occur, causing injury.

The operator must not hold the trigger or press on contact arm except during fastening operation as serious injury can result if the trip accidentally contacts someone or something, causing the tool to cycle.



Keep hands and body away from the discharge area of the tool. A contact arm tool may bounce from the recoil of driving a fastener and an unwanted second fastener may be driven, possibly causing injury.

Check operation of the contact-arm mechanism frequently. Do not use the tool if the arm is not working correctly as accidental driving of a fastener may result. Do not interfere with the proper operation of the contact-arm mechanism.

Do not drive fasteners on top of other fasteners or with the tool at an overly steep angle as this may cause deflection of fasteners which could cause injury.

Do not drive fasteners close to the edge of the work piece as the wood may split, allowing the fastener to be deflected causing injury.

This tool has either a selective actuation for contact actuation or sequential contact actuation, or is solely contact actuation, or solely contact actuation. Its intended uses are for production applications such as pallets, furniture, manufactured housing, upholstery, and sheathing.

When using this tool in selective actuation mode, always ensure it is in the correct actuation setting. Do not use this tool in contact actuation for applications such as closing boxes or crates and fitting transportation safety systems on trailers and lorries.

Be careful when changing from one driving location to another.



MAINTAINING THE TOOL

When working on air tools, note the warnings in this manual and use extra care when evaluating tools with problems.

The Directive 2006/42/EC and the regulation 2008 No. 1957 and the ISO International Standard EN ISO 11148-13:2018 lay down certain safety requirements for hand-held non-electric power fastener driving tools, and in your own interest we recommend you follow these safety requirements without exception.

EVERWIN Fastener Driving Tools



Read and understand tool labels and the manual. Failure to follow warnings could result in serious injury.



Operators and others in the work area shall wear impact-resistant eye protection with side shields.



Operators and others in the work area shall wear hearing protection.

EVERWIN fasteners driving tools consist of: tool and fasteners. In the interests of operator and system safety, the tool and fasteners referred to in the EVERWIN documents, must be considered as one single, complete system.



Statement of Use

- EVERWIN fasteners driving tools must be used like described in the operating manual.
- EVERWIN fasteners driving tools shall only be used for production applications. For applications outside of production applications, please consult an authorized EVERWIN distributor for proper safety conversion kits.
- Keep fingers away from trigger when not operating this tool and when moving from one operating position to another.

General Safety Rules

- To drive fasteners into hard surfaces like steel & concrete use the appropriated tools. For users in countries in the EU, please refer to EC declaration of those tools. For users in the UK, please refer to UKCA declaration of those tools. For these tools the angle between the tool and the surface must not be over 15°.

Multiple Hazards

- Read and understand the safety instructions before connecting, disconnecting, loading, operating, maintaining, changing accessories on, or working near the tool. Failure to do so can result in serious bodily injury.
- Keep all body parts such as hands and legs, etc., away from firing direction and ensure fasteners cannot penetrate through a workpiece into parts of the body.
- When using the tool, be aware that the fastener could deflect and cause injury.
- Hold the tool with a firm grasp and be prepared to manage recoil.

- Only technically skilled operators should use the fastener driving tool.
- Do not modify the fastener driving tool. Modifications may reduce the effectiveness of safety measures and increase the risks to the operator and/or bystander.
- Review information for tools intended to be used on hard surfaces such as steel and concrete regarding the additional downforce required to operate the tool and prevent slipping.
- Do not discard the safety instructions.
- Do not use a tool if the tool has been damaged.
- Be careful when handling fasteners, especially when loading and unloading, as the fasteners have sharp points which could cause injury.
- Always check the tool before use for broken, misconnected, or worn parts.
- Do not overreach. Only use in a safe working place. Keep proper footing and balance at all times.
- Keep bystanders away (when working in an area where there is a likelihood of through traffic of people). Clearly mark off your operating area.
- Never point the tool at yourself or others. If the operator has to move locations, the tool must be carried pointed downwards.
- Only wear gloves that provide adequate feel and safe control of triggers and any adjusting devices.

Projectile Hazards

- The fastener driving tool shall be disconnected when unloading fasteners, making adjustments, clearing jams or changing accessories.
- During operation be careful that fasteners penetrate material correctly and cannot be deflected /misfired towards operator and /or any bystanders.
- During operation, debris from the workpiece and fastening/collation system may be discharged.
- Always wear impact-resistant eye protection with side shields during operation of the tool.
- The risks to others shall be assessed by the operator.
- Be careful with tools without workpiece contact as they can be fired unintentionally and injure operator and/or bystander.
- Ensure tool is always safely engaged on the workpiece and cannot slip.

Operating Hazards

- Hold the tool correctly: be ready to counteract normal or sudden movements such as recoil.
- Maintain a balanced body position and secure footing.
- Appropriate safety glasses shall be used, and appropriate gloves and protective clothing are recommended.
- Appropriate hearing protection shall be worn.
- Use the correct energy supply as directed in the manual.

Repetitive Motions Hazards

- When using a tool for long periods, the operator may experience discomfort in the hands, arms, shoulders, neck, or other parts of the body.
- While using a tool, the operator should adopt a suitable but ergonomic posture. Maintain secure footing and avoid awkward or off-balanced postures.
- If the operator experiences symptoms such as persistent or recurring discomfort, pain, throbbing, aching, tingling, numbness, burning sensation, or stiffness, do not ignore these warning signs. The operator should consult a qualified health professional regarding overall activities.

Accessory and Consumable Hazards

- Disconnect the energy supply to the tool, such as air, gas, or battery, before changing /replacing accessories such as workpiece contact, or making any adjustments.
- Use only the sizes and types of accessories that are provided by EVERWIN PNEUMATIC CORP.
- Use only lubricants recommended by EVERWIN PNEUMATIC CORP. slippery surfaces caused by use of the tool and also trip hazards caused by the airline hose.gripping force, the contact pressure force, the working direction, the adjustment of energy supply, the workpiece, the workpiece support.

Workplace Hazards

- Slips, trips, and falls are major causes of workplace injury. Be aware of slippery surfaces caused by use of the tool and also trip hazards caused by the airline hose.
- Proceed with additional care in unfamiliar surroundings. Hidden hazards may exist, such as electricity or other utility lines.
- This tool is not intended for use in potentially explosive atmospheres and is not insulated from coming into contact with electrical power.
- Make sure there are no electrical cables, gas pipes, etc. that could cause a hazard if damaged by use of the tool.

Dust and Exhaust Hazards

- If the tool is used in an area where there is static dust, it may disturb the dust and cause a hazard. Proceed with the following:
- Direct the exhaust to minimize disturbance of dust in a dust filled environment.
 - Where dust or exhaust hazards are created, the priority shall be to control them at the point of emission.

Noise Hazards

- The noise values reported in the operation manual are tool-related characteristic values and do not represent the noise generation at the point of use. Noise at the point of use will for example depend on the working environment, the workpiece, the workpiece support, and the number of driving operations.
- Unprotected exposure to high noise levels can cause permanent, disabling, hearing loss and other problems such as tinnitus (ringing, buzzing, whistling or humming in the ears).

- Appropriate controls to reduce the risk may include actions such as damping materials to prevent workpieces from “ringing”.
- Use appropriate hearing protection.
- Operate and maintain the tool as recommended in these instructions, to prevent an unnecessary increase in noise levels.
- If the tool has a silencer, always ensure it is in place and in good working order when the tool is being operated.

Vibration Hazards

- The vibration emission value reported in the operation manual is a tool-related characteristic value and does not represent the influence to the hand-arm-system when using the tool. Any influence to the hand-arm-system when using the tool will for example depend on the gripping force, the contact pressure force, the working direction, the adjustment of energy supply, the workpiece, the workpiece support.
- Exposure to vibration can cause disabling damage to the nerves and blood supply of the hands and arms.
- Wear warm clothing when working in cold conditions, keep your hands warm and dry.
- If you experience numbness, tingling, pain, or whitening of the skin in your fingers or hands, seek medical advice from a qualified occupational health professional regarding overall activities.
- Operate and maintain the tool as recommended in these instructions, to prevent an unnecessary increase in vibration levels.
- Hold the tool with a light, but safe, grip because the risk from vibration is generally greater when the grip force is higher.

Additional Safety Instructions for Pneumatic tools

- Compressed air can cause severe injury.
- Always shut off air supply and disconnect tool from air supply when not in use.
- Always disconnect the tool from the compressed air supply before changing accessories, making adjustments and /or repairs, when moving away from an operating area to a different area.
- Keep fingers away from trigger when not operating the tool and when moving from one operating position to another.
- Never direct compressed air at yourself or anyone else.
- Whipping hoses can cause severe injury. Always check for damaged or loose hoses or fittings.
- Never carry a pneumatic tool by its hose.
- Never drag a pneumatic tool by its hose.
- When using pneumatic tools, do not exceed the maximum operating pressure ps max.
- Pneumatic tools should only be powered by compressed air at the lowest pressure required for the work process to reduce noise and vibration and minimize wear.
- Using oxygen or combustible gases for operating pneumatic tools creates a fire and explosion hazard.
- Be careful when using pneumatic tools as the tool could become cold, affecting grip and control.

SPECIFICATIONS

Model	SN41S4 SN41S4A	SN41S5 SN41S5A	SN41S5-D SN41S5A-D	SN412S2 SN412S2A	SN41S2 SN41S2A	SN41S2-R SN41S2A-R
Height	255mm (8.8")	255mm (8.8")	256.5mm (8.8")	255mm (8.8")	255mm (8.8")	255mm (8.8")
Width	64mm (2.5")	64mm (2.5")	64mm (2.6")	64mm (2.5")	67mm (2.6")	67mm (2.6")
Length	354mm (13.9")	354mm (13.9")	355mm (13.9")	354mm (13.9")	354mm (13.9")	354mm (13.9")
Weight	2.0 kgs (4.4 lbs)	2.0 kgs (4.4 lbs)	2.27 kgs (5.0 lbs)	2.3 kgs (5.0 lbs)	2.3 kgs (5.0 lbs)	2.4 kgs (5.3 lbs)
Loading Capacity	160	160~180	160~180	160	160	160
Air Consumption at 6.2 bar (90PSI) Pressure	0.6 liter/second (1.25 cfm)	0.6 liter/second (1.25 cfm)	0.96 liter/second (2.03 cfm)	0.6 liter/second (1.25 cfm)	0.6 liter/second (1.25 cfm)	0.6 liter/second (1.25 cfm)

FASTENER SPECIFICATIONS

Model	SN41S4 SN41S4A	SN41S5 SN41S5A	SN41S5-D SN41S5A-D	SN412S2 SN412S2A	SN41S2 SN41S2A	SN41S2-R SN41S2A-R
Staple Length	19~40mm (3/4"~1-9/16")	19~40mm (3/4"~1-9/16")	19~40mm (3/4"~1-9/16")	25~50mm (1"~2")	19 ~ 38 mm (3/4"~1-1/2")	19 ~ 38 mm (3/4"~1-1/2")
Crown Width	12.5mm (1/2")	10.6~11.1mm (7/16")	10.6~11.1mm (7/16")	25.4mm (1")	25.4mm (1")	25.4mm (1")
Shank Dia.	1.60 x 1.40mm (0.062" x 0.055")	1.60 x 1.40mm (0.062" x 0.055") 1.45 x 1.3mm (0.057" x 0.051")	1.60 x 1.40mm (0.062" x 0.055") 1.45 x 1.3mm (0.057" x 0.051")	1.60 x 1.40mm (0.062" x 0.055")	1.60 x 1.40mm (0.062" x 0.055")	1.60 x 1.40mm (0.062" x 0.055")
Type	16 GA. Bostitch BCS4 / Atro 16 NC	16 & 17 GA. Bostitch BCS5 / SENCO N / BeA 155	16 & 17 GA. Bostitch BCS5 / SENCO N / BeA 155	16 GA. Bostitch BCS2 / Prebena WC	16 GA. Bostitch BCS2 / Prebena WC	16 GA. Bostitch BCS2 / Prebena WC

TOOL AIR FITTING

This tool uses a 1/4"-19 P.T & 1/4"-18 N.P.T male plug. The inside diameter should be 5 mm (0.200") or larger. The fitting must be capable of discharging tool air pressure when disconnected from the air supply.

OPERATING PRESSURE

5 to 8bar (70 to 120PSI). Select the operating pressure within this range for best fastener performance. Do not exceed this recommended operating pressure.

AIR CONSUMPTION

Tool air consumption: SN41S4, SN41S5, SN412S2, SN41S2, SN41S2-R : 0.6 liter/second (1.25 cfm)
SN41S5-D : 0.96 liter/second (2.03 cfm) of free air to operate at the rate of 100 nails per minute, at 6.3 bar (90 PSI).

NOISE

A-weighted single-event sound power level LWA,1sd: 93 dBA

A-weighted single-event emission sound pressure level at work station LPA 1sd: 83.7 dBA

These values are determined and documented in accordance to EN12549.





VIBRATION

Vibration / Uncertainty: < 2.5 / N/A m/s²

These values are determined and documented in accordance to ISO 8662-11.

This value is a tool-related characteristic value and does not represent the influence to the hand-arm-system when using the tool. An influence to the hand-arm-system when using the tool will, for example, depend on the gripping force, the contact pressure force, the working direction, the adjustment of mains supply and the workpiece support.

Refer to Operation Instructions and warnings pages before proceeding to use this tool.
There are four available systems in these tools :

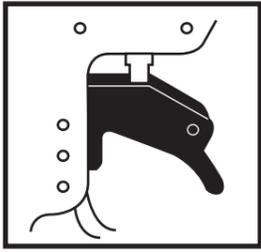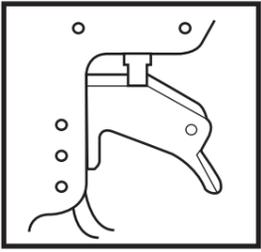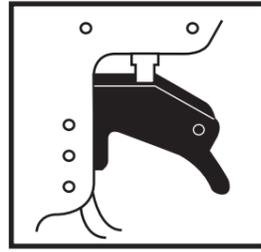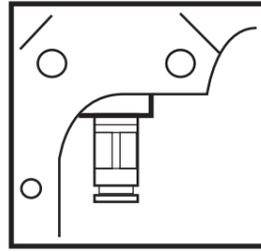1. Contact Trip	2. Sequential Trip	3. Automatic Operated	4. Remote Fire
Identified by Black Trigger	Identified by Grey Trigger	Identified by Blue Valve and Speed Regulator	Identified by Control Valve Air Inlet
			

1. Contact Trip

(available system on : SN41S4-CT, SN41S5-CT, SN41S5-D-CT, SN412S2-CT, SN41S2-CT, SN41S2-R-CT)

The common operating procedure on “Contact Trip” tools is for the operator to contact the workpiece to actuate the trip mechanism while keeping the trigger pulled, thus driving a fastener each time the workpiece is contacted. This will allow rapid fastener placement on many jobs, such as sheathing, decking, and pallet assembly. All pneumatic tools are subject to recoil when driving fasteners. The tool may bounce, releasing the trip, and if unintentionally allowed to recontact the work surface with the trigger still actuated (finger still holding trigger pulled) an unwanted second fastener will be driven.

2. Sequential Trip

(available system on : SN41S4-ST, SN41S5-ST, SN41S5-D-ST, SN412S2-ST, SN41S2-ST, SN41S2-R-ST)

The Sequential Trip requires the operator to hold the tool against the work before pulling the trigger. This makes accurate fastener placement easier, for instance on framing, toe nailing, and crating applications. The Sequential Trip allows exact fastener location without the possibility of driving a second fastener on recoil, as described under “Contact Trip”. The Sequential Trip Tool has a positive safety advantage because it will not accidentally drive a fastener if the tool is contacted against the workpiece – or anything else – while the operator is holding the trigger pulled.

3. Automatic Operated

(available system on : SN41S4A, SN41S5A, SN41S5A-D, SN412S2A, SN41S2A, SN41S2A-R)

The automatic model is cycled by pushing contact trip against the work piece and then pulling the trigger. When the trigger is held and the contact trip is pressed against the work piece, the tool will continuously drive fasteners automatically. The rate at which fasteners are driven in the automatic mode is adjustable by turning the adjustment screw at the side of trigger valve area. Turning the screw counterclockwise increases the speed and in a clockwise direction to decrease the speed.

4. Remote Fire

The remote model is cycled by either remote control valve RCVA or TVA to control air on and off.



DO NOT USE OXYGEN, COMBUSTIBLE GASES, OR BOTTLED GASES AS A POWER SOURCE FOR THIS TOOL AS TOOL MAY EXPLODE, POSSIBLY CAUSING INJURY.

FITTINGS

Install a male plug on the tool which is free flowing and which will release air pressure from the tool when disconnected from the supply source.

HOSES

Air hoses should have a minimum of 10.6 bar (150 PSI) working pressure rating or 150 percent of the maximum pressure that could be produced in the air system. The supply hose should contain a fitting that will provide “quick disconnecting” from the male plug on the tool.

SUPPLY SOURCE

Use only clean, regulated compressed air as a power source for this tool. Never use oxygen, combustible gases, or bottled gases as a power source for this tool as the tool may explode.

REGULATOR

A pressure regulator with an operating pressure of 0 ~ 8.79 bar (0 ~ 125 PSI) is required to control the operating pressure for safe operation of this tool. Do not connect this tool to air pressure which can potentially exceed 14 bar (200 PSI) as tool may fracture or burst, causing injury.

OPERATING PRESSURE

Do not exceed recommended maximum operating pressure as tool wear will be greatly increased. The air supply must be capable of maintaining the operating pressure at the tool. Pressure drops in the air supply can reduce the tool’s driving power. Refer to “Tool Specifications” for setting the correct operating pressure for the tool.

FILTER

Dirt and water in the air supply are major causes of wear in pneumatic tools. A filter will help to get the best performance and minimum wear from the tool. The filter must have adequate flow capacity for the specific installation. The filter has to be kept clean to be effective in providing clean compressed air to the tool. Consult the manufacturer’s instructions on proper maintenance of your filter. A dirty and/or clogged filter will cause a pressure drop which will reduce the tool’s performance.

Frequent, but not excessive, lubrication is required for best performance. Air - tool oil added through the air line connection will lubricate the internal parts. Do not use detergent oil or additives as these lubricants will cause accelerated wear to the seals and bumpers in the tool, resulting in poor tool performance and frequent tool maintenance.

If no air line lubricator is used, add oil during use into the air fitting on the tool once or twice a day. Only a few drops of oil at a time is necessary. Too much oil will only collect inside the tool and will be noticeable in the exhaust cycle.

Cold Weather Operation

For cold weather operation, near and below freezing, the moisture in the air line may freeze and prevent tool operation. We recommend the use of permanent antifreeze (ethylene glycol) as a cold weather lubricant.

CAUTION

Do not store tools in a cold-weather environment to prevent frost or ice formation on the tools operating valves and mechanisms, which could cause tool failure. Test tool without fasteners prior to operations to ensure no malfunction on the tool due to ice formation.

NOTE

Some commercial air line drying liquids are harmful to O-Rings and seals – do not use these low temperature air dryers without checking compatibility.



EYE PROTECTION

Which conforms to ANSI/ CE specifications and provides protection against flying particles both from the FRONT and SIDE should ALWAYS be worn by the operator and others in the work area when connecting to air supply, loading, operating, or servicing this tool. Eye protection is required to guard against flying fasteners and debris, which could cause severe eye injury. The employer and/or user must ensure that proper eye protection is worn. Eye protection equipment must conform to the requirements of the ANSI Z87.1 and 89/686/EEC, and provide both frontal and side protection.

NOTE


Non-side shielded spectacles and face shields alone do not provide adequate protection.



TO PREVENT ACCIDENTAL INJURIES

- Never place a hand or any other part of the body in the discharge area of tool while the air supply is connected.
- Never point the tool at anyone else.
- Never engage in horseplay.
- Never pull the trigger unless the nose is directed at the workpiece.
- Always handle the tool with care.
- Do not pull the trigger or depress the trip mechanism while loading the tool.

Loading the Tool

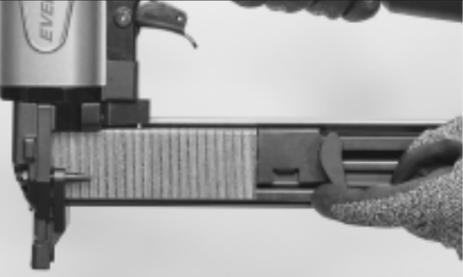Move Pusher backward	Loading Fasteners:	Release Pusher:
		
<p>Pull pusher to rear until latched. Cover will open. Pusher front will drop into notch on the top of magazine assembly.</p>	<p>Drop staple stick over magazine and slide forward. Repeat until magazine is loaded, allow enough space for pusher to disengage the magazine and cover to close. Approximately 1/2" (13 mm).</p>	<p>Pull and turn the knob in the clockwise direction to release pusher.</p>



EYE PROTECTION

Which conforms to ANSI/ CE specifications and provides protection against flying particles both from the FRONT and SIDE should ALWAYS be worn by the operator and others in the work area when connecting to air supply, loading, operating, or servicing this tool. Eye protection is required to guard against flying fasteners and debris, which could cause severe eye injury. The employer and/or user must ensure that proper eye protection is worn. Eye protection equipment must conform to the requirements of the ANSI Z87.1 and 89/686/EEC, and provide both frontal and side protection.

NOTE

Non-side shielded spectacles and face shields alone do not provide adequate protection.



BEFORE HANDLING OR OPERATING THIS TOOL

- Read and understand the warnings contained in this manual.
- Refer to “tool specifications” in this manual to identify the operating system on your tool.

There are four available systems in these tools :

1. Contact Trip Operation

(available system on : SN41S4-CT, SN41S5-CT, SN41S5-D-CT, SN412S2-CT, SN41S2-CT, SN41S2-R-CT)

The CONTACT TRIP MODEL tool contains a contact trip that operates in conjunction with the trigger to drive a fastener. To operate the tool in this manner, hold the tool with the contact trip pointing towards but not touching the work surface. Pull the trigger and then tap the contact trip against the work surface using a bouncing motion. Each depression of the contact trip will cause a fastener to be driven.

WARNING

The operator must not hold the trigger on contact trip tools except during fastening operation, as serious injury could result if the trip accidentally contacts someone or something, causing the tool to cycle.

WARNING

Keep hands and body away from the discharge area of the tool. A contact trip tool may bounce from the recoil of driving a fastener and an unwanted second fastener may be driven, causing injury.

2. Sequential Trip Operation

(available system on : SN41S4-ST, SN41S5-ST, SN41S5-D-ST, SN412S2-ST, SN41S2-ST, SN41S2-R-ST)

The SEQUENTIAL TRIP MODEL contains a contact trip that operates in conjunction with the trigger to drive a fastener. To operate a sequential trip tool, first position the contact trip on the work surface WITHOUT PULLING THE TRIGGER. Depress the contact trip and then pull the trigger to drive a fastener. As long as the contact trip is contacting the work and is held depressed, the tool will drive a fastener each time the trigger is depressed. If the contact trip is allowed to leave the work surface, the sequence described above must be repeated to drive another fastener.

3. Automatic Operation

(available system on : SN41S4A, SN41S5A, SN41S5A-D, SN412S2A, SN41S2A, SN41S2A-R)

The automatic model is cycled by pushing contact trip against the work piece and then pulling the trigger. When the trigger is held and the contact trip is pressed against the work piece, the tool will continuously drive fasteners automatically. The rate at which fasteners are driven in the automatic mode is adjustable by turning the adjustment screw at the side of trigger valve area. Turning the screw counterclockwise increases the speed and in a clockwise direction to decrease the speed.

4. Remote Fire

The remote model is cycled by either remote control valve RCVA or TVA to control air on and off.

CAUTION

Remove all fasteners from tool before performing tool operation check.

1. Contact Trip Operation / Automatic Operation

a. With finger off the trigger, press the contact trip against the work surface.

a. The tool **MUST NOT** cycle.

b. Hold the tool off the work surface, and pull the trigger.

b. The tool **MUST NOT** cycle.

c. With the tool off the work surface, pull the trigger. Press the contact trip against the work surface.

c. The tool **MUST** cycle.

d. Without touching the trigger, press the contact trip against the work surface, then pull the trigger.

d. The tool **MUST** cycle.

2. Sequential Trip Operation

a. Press the contact trip against the work surface, without touching the trigger.

a. The tool **MUST NOT** cycle.

b. Hold the tool off the work surface, and pull the trigger.

b. The tool **MUST NOT** cycle.

Release the trigger. The trigger must return to the trigger stop on the frame.

c. Pull the trigger and press the contact trip against the work surface.

c. The tool **MUST NOT** cycle.

d. With finger off the trigger, press the contact trip against the work surface. Pull the trigger

d. The tool **MUST** cycle.

In addition to the other warnings contained in this manual observe the following for safe operation :

- Never use this tool in a manner that could cause a fastener to be directed toward the user or others in the work area.
- Do not use the tool as a hammer.
- Always carry the tool by the handle. Never carry the tool by the air hose.
- Do not carry this tool with the trigger depressed when not in use.
- Do not alter or modify this tool from the original design or function.
- Always be aware that misuse and improper handling of this tool can cause injury to yourself and others.
- Never clamp or tape the trigger or contact trip in an actuated position.
- Never leave a tool unattended with the air hose attached.
- Do not operate this tool if it does not contain a legible WARNING LABEL.
- Do not continue to use a tool that leaks air or does not function properly. Notify your distributor or representative if your tool continues to experience functional problems.

WARNING


ALWAYS disconnect air supply before performing following adjustment.

Depth of Drive Adjustment

The "DEPTH OF DRIVE ADJUSTMENT" feature provides close control of the fastener drive depth; from flush with the work surface to shallow or deep countersink. First, set the air pressure for consistent drive in the specific work as described above, then use the "DEPTH OF DRIVE ADJUSTMENT" to give the desired depth of drive.

TO ADJUST "DEPTH OF DRIVE ADJUSTMENT" :

1. With air pressure set, drive a few fasteners into a representative material sample to determine if adjustment is necessary.
2. If adjustment is required, disconnect the air supply.
3. Refer to label on the outside of door for direction to turn adjusting nut. (See illustration)
4. Remove the cover mounting nuts, cover, and adapter. Observe the orientation of the flats on the adjusting nut. Rotate the adjusting nut to the left to increase fastener drive depth, or to the right to decrease it. Reorient the flats to be same as before. Reinstall adapter, cover, and mounting nuts.
5. Before reconnecting the air supply, check that the trip mechanism parts operate freely with no binding or sticking.
6. Reconnect the air supply.

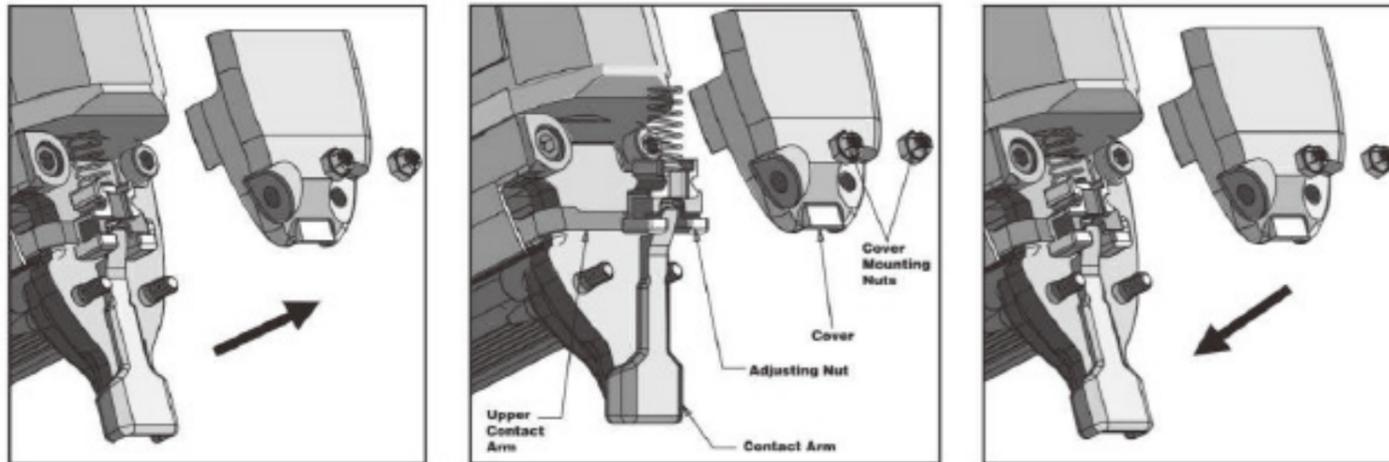

<p>Power Adjustment Valve</p>		<ol style="list-style-type: none"> 1. For increasing driving power: Rotate valve clockwise to increase power. 2. For reducing driving power: Rotate valve counterclockwise to reduce power.
<p>Directional Exhaust Deflector</p>		<ol style="list-style-type: none"> 1. Rotate exhaust deflector to desired position.

Speed Adjustment Valve (Automatic Ver. Only)



1. For increasing driving speed
Rotate valve counterclockwise to increase speed
2. For reducing driving speed
Rotate valve clockwise to reduce speed

MAINTAINING THE PNEUMATIC TOOL

WARNING

When working on pneumatic tools, note the warnings in this manual and use extra care evaluating tools with problems. Disconnect the air supply and empty the magazine when inspecting or maintaining the tool.

REPLACEMENT PARTS

Use only genuine parts from the manufacturer or distributor. Do not use modified parts or parts which will not give equivalent performance to the original equipment. Tighten all screws. Keep contact arm moving smoothly.

ASSEMBLY PROCEDURE FOR SEALS

When repairing a tool, make sure the internal parts are clean and lubricated. Use O-Ring lubricant on all O-Rings. Coat each O-Ring with O-Ring lubricant before assembling. Use a small amount of oil on all moving surfaces and pivots. After reassembly add a few drops of Air Tool Lubricant through the air line fitting before testing.

AIR PRESSURE AND VOLUME

Air volume is as important as air pressure. The air volume supplied to the tool may be inadequate because of undersize fittings and hoses, or from the effects of dirt and water in the system. Restricted air flow will prevent the tool from receiving an adequate volume of air, even though the pressure reading is high. The results will be slow operation, misfeeds or reduced driving power. Before evaluating tool problems for these symptoms, trace the air supply from the tool to the supply source for restrictive connectors, swivel fittings, low points containing water and anything else that would prevent full volume flow of air to the tool.

DRIVER MAINTENANCE INSTRUCTIONS

Worn drivers can cause poor driving quality or loss of power:

Worn or chipped driving tips will affect the fastener drive, give symptoms of bent and incompletely driven fastener, and damaged fastener heads.

When there is a need, please contact a qualified service technician for this replacement.

The troubleshooting and / or repairs shall be carried out only by the authorized dealer / distributor or by other pneumatic tool specialists.

Quick Jam-Releasing Magazine

The stapler contains a “Quick Jam-Releasing Magazine” feature. The magazine is spring loaded to reduce jamming. When a jam does occur, a quick release mechanism at the rear of the magazine allows the magazine to move back, in order to clear the jam.

ALWAYS DISCONNECT AIR SUPPLY BEFORE CLEARING A JAMMED FASTENER.

WARNING


If a jam does occur, locate the latch at the rear of magazine (FIG. 1).

Pull down on the latch to open (FIG. 2).

And rotate it clockwise 1/4 turn (FIG. 3).

Pull back on the latch (FIG. 4).

This will pull the magazine back to clear the jam. After removing the jammed fastener, push on the latch, rotate it 1/4 turn counterclockwise and push up to close.

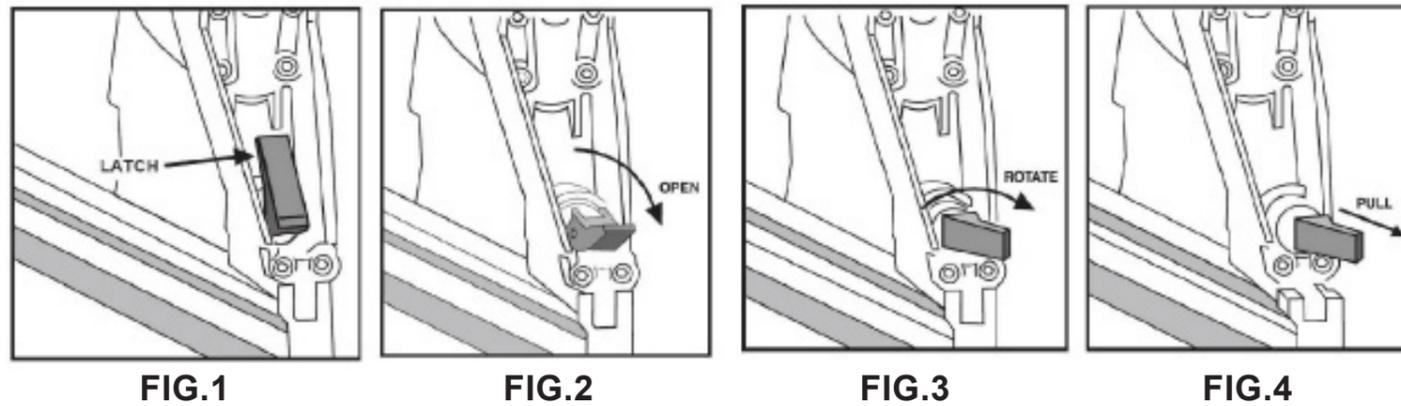

TOUGHER FASTER SMARTER

Follow Us to Get More Information



@everwintaiwan



@everwin_official



Everwin Pneumatic



STANDARD MODULE ASSEMBLY KIT

ETVA12

FOR MODELS:

EVERWIN SN41S2, SN41S2-R,
SN412S2, SN41S4, SN41S5 /
Bostitch 438S2, 438S2R, 438S4
438S5, 450S2, 538S214, 538S4
538S5 / DeWALT DW450S2



PARTS INCLUDED IN THIS KIT:

- (1)- Standard Module Assembly
- (1)-4mm Spring Pin
- (1)- 3mm Spring Pin
- (1)- Lubricant

ADDITIONAL TOOLS NEEDED
FOR KIT INSTALLATION:

- Light Hammer
- Clean Dry Rag

SAFETY INSTRUCTIONS

⚠WARNING:



EYE PROTECTION which conforms to ANSI specifications and provides protection against flying particles both from the FRONT and SIDE should ALWAYS be worn by the operator and others in the work area when connecting to air supply, loading, operating or servicing this tool. Eye protection is required to guard against flying fasteners and debris, which could cause severe eye injury.

The employer and/or user must ensure that proper eye protection is worn. Eye protection equipment must conform to the requirements of the American National Standards Institute, ANSI Z87.1 and provide both frontal and side protection. NOTE: Non-side shielded spectacles and face shields alone do not provide adequate protection.

⚠WARNING:

Always disconnect air supply: 1.) Before making adjustments; 2.) When servicing the tool; 3.) When clearing a jam; 4.) When tool is not in use; 5.) When moving to a different work area, as accidental actuation may occur, possibly causing injury.

⚠WARNING:

Do not use gasoline or similar highly flammable liquids to clean the nailer. Vapor in the nailer could be ignited by a spark causing the tool to explode.


⚠WARNING:

When working on air tools, note the warnings and cautions in this guide and in the Operation and Maintenance Manual covering this specific tool. USE EXTRA CARE WHEN EVALUATING PROBLEM TOOLS.


STANDARD MODULE KIT ETVA12 INSTALLATION INSTRUCTIONS FOR MODELS:

EVERWIN SN41S2, SN41S2-R, SN412S2, SN41S4, SN41S5, SN41P, SN41GSW, SN41GSI

Bostitch 438S2, 438S2R, 438S4, 438S5, 450S2, 538S214, 538S4, 538S5 DeWALT DW450S2

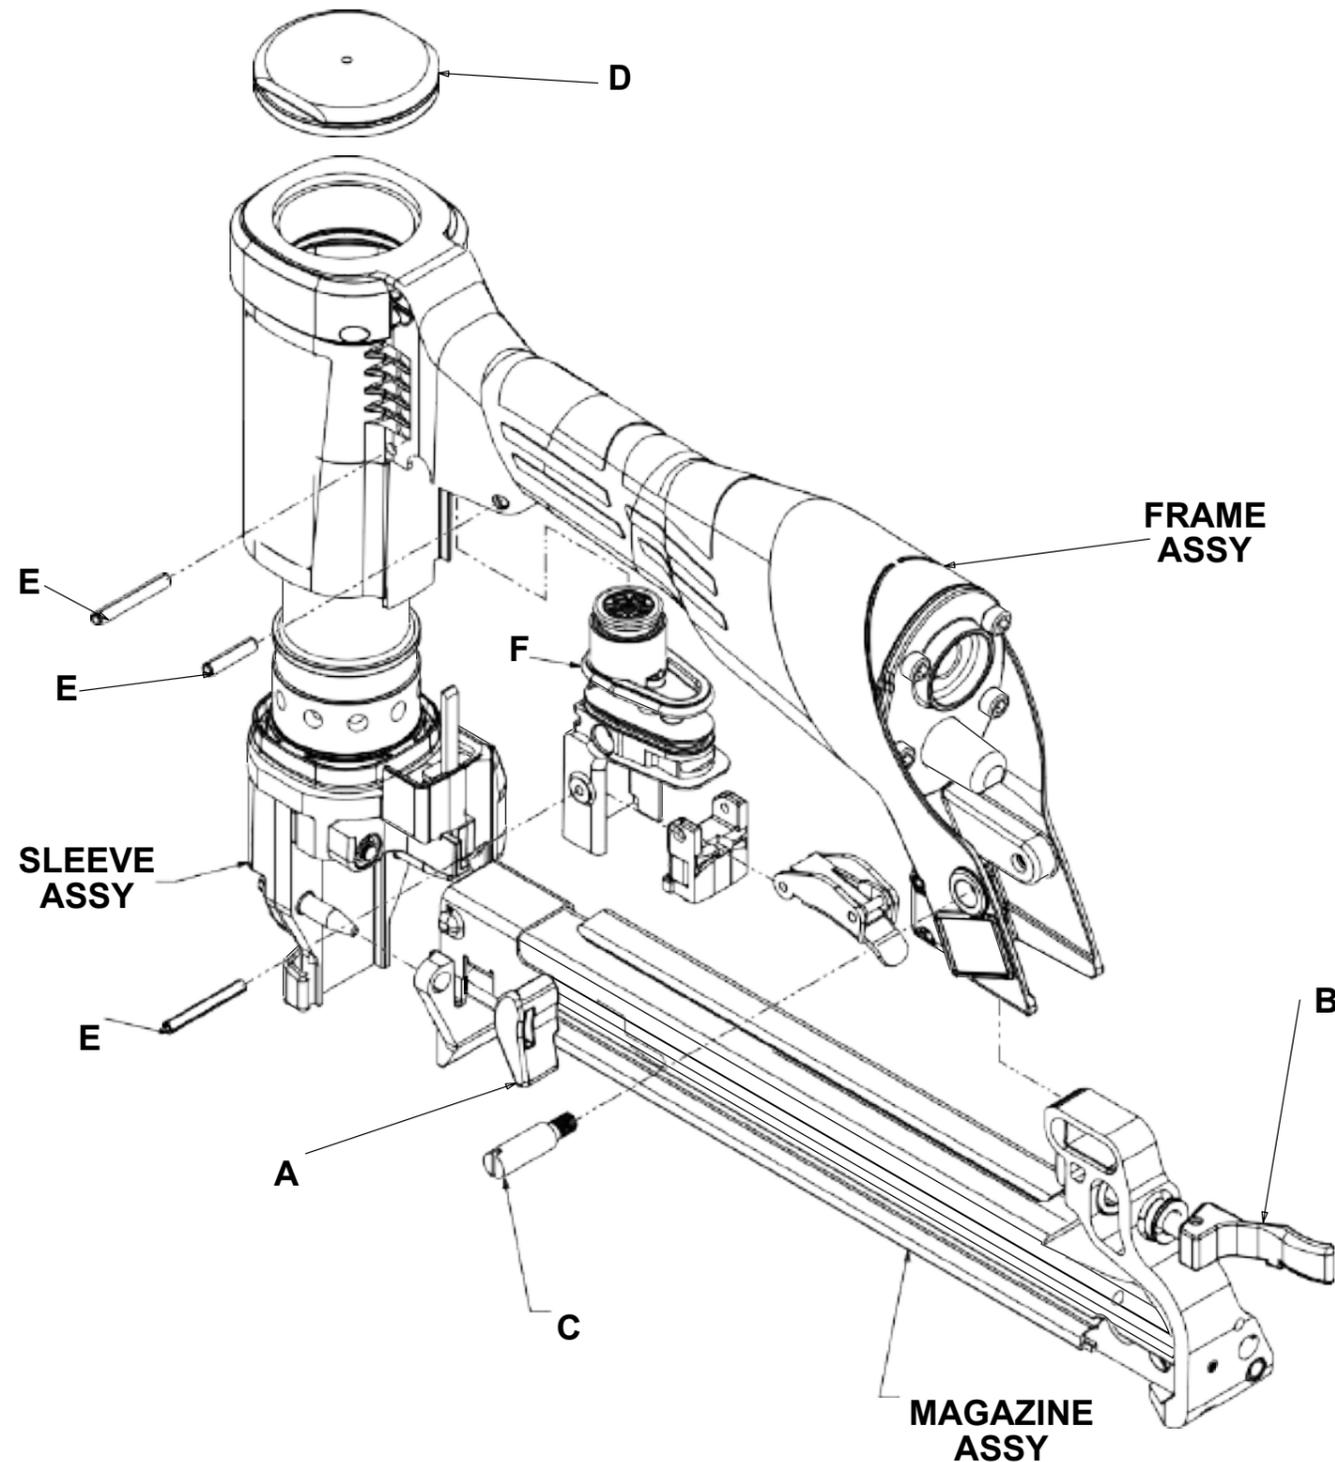

1. Disconnect the air line from the tool. Remove all staples from the magazine and position the pusher(A) to the front of the magazine.
2. Unlatch the magazine by pulling the latch down, then rotate it clockwise 1/4 turn (B). (see figure 1- 4)
3. Remove the magazine mounting pin (C). Remove magazine assembly.
4. Unscrew the cylinder cap (D) using a bench vise or a sleeve cap wrench (part no. 106427 not supplied).
5. Remove the frame assembly from the sleeve assembly.
(careful not to damage the sleeve threads.)
6. Using 3mm and 4mm Pin Punches and a light hammer, gently tap out the spring pins (E) holding both the trigger valve and trigger assembly.
7. Remove the trigger valve assembly (F) and discard. NOTE: If the valve assembly is stuck in frame, pry the valve out with a flat blade screw driver.
8. Lightly grease the valve housing o-ring and frame valve pocket with the grease provided. Install the new valve assembly in the frame aligning the valve spring pin grooves with the frame holes.
9. Reassemble the trigger assembly and install all three spring pins.
10. Test tool for operation according to instructions in Operations Manual for the specific model of tool and check for leakage.

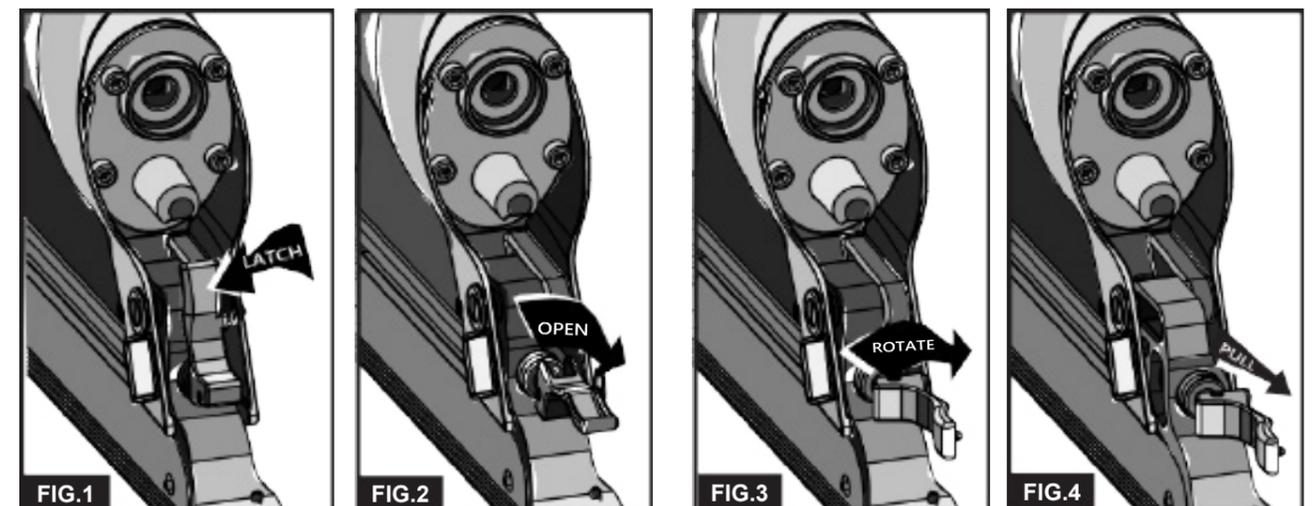

AUTOMATIC MODULE ASSEMBLY KIT

ETVA12-AF

FOR MODELS:

EVERWIN SN41S2, SN41S2-R,
SN412S2, SN41S4, SN41S5 /
Bostitch 438S2, 438S2R, 438S4
438S5, 450S2, 538S214, 538S4
538S5 / DeWALT DW450S2



PARTS INCLUDED IN THIS KIT:

- (1)- Automatic Module Assembly
- (1)-4mm Spring Pin
- (1)- 3mm Spring Pin
- (1)- Lubricant

ADDITIONAL TOOLS NEEDED
FOR KIT INSTALLATION:
Light Hammer
Clean Dry Rag

SAFETY INSTRUCTIONS

⚠WARNING:



EYE PROTECTION which conforms to ANSI specifications and provides protection against flying particles both from the FRONT and SIDE should ALWAYS be worn by the operator and others in the work area when connecting to air supply, loading, operating or servicing this tool. Eye protection is required to guard against flying fasteners and debris, which could cause severe eye injury.

The employer and/or user must ensure that proper eye protection is worn. Eye protection equipment must conform to the requirements of the American National Standards Institute, ANSI Z87.1 and provide both frontal and side protection. NOTE: Non-side shielded spectacles and face shields alone do not provide adequate protection.

⚠WARNING:

Always disconnect air supply: 1.) Before making adjustments; 2.) When servicing the tool; 3.) When clearing a jam; 4.) When tool is not in use; 5.) When moving to a different work area, as accidental actuation may occur, possibly causing injury.

⚠WARNING:

Do not use gasoline or similar highly flammable liquids to clean the nailer. Vapor in the nailer could be ignited by a spark causing the tool to explode.


⚠WARNING:

When working on air tools, note the warnings and cautions in this guide and in the Operation and Maintenance Manual covering the specific tool. USE EXTRA CARE WHEN EVALUATING PROBLEMTOOLS.


STANDARD MODULE KIT ETVA12 INSTALLATION INSTRUCTIONS FOR MODELS:

EVERWIN SN41S2, SN41S2-R, SN412S2, SN41S4, SN41S5, SN41P, SN41GSW, SN41GSI

Bostitch 438S2, 438S2R, 438S4, 438S5, 450S2, 538S214, 538S4, 538S5 DeWALT DW450S2

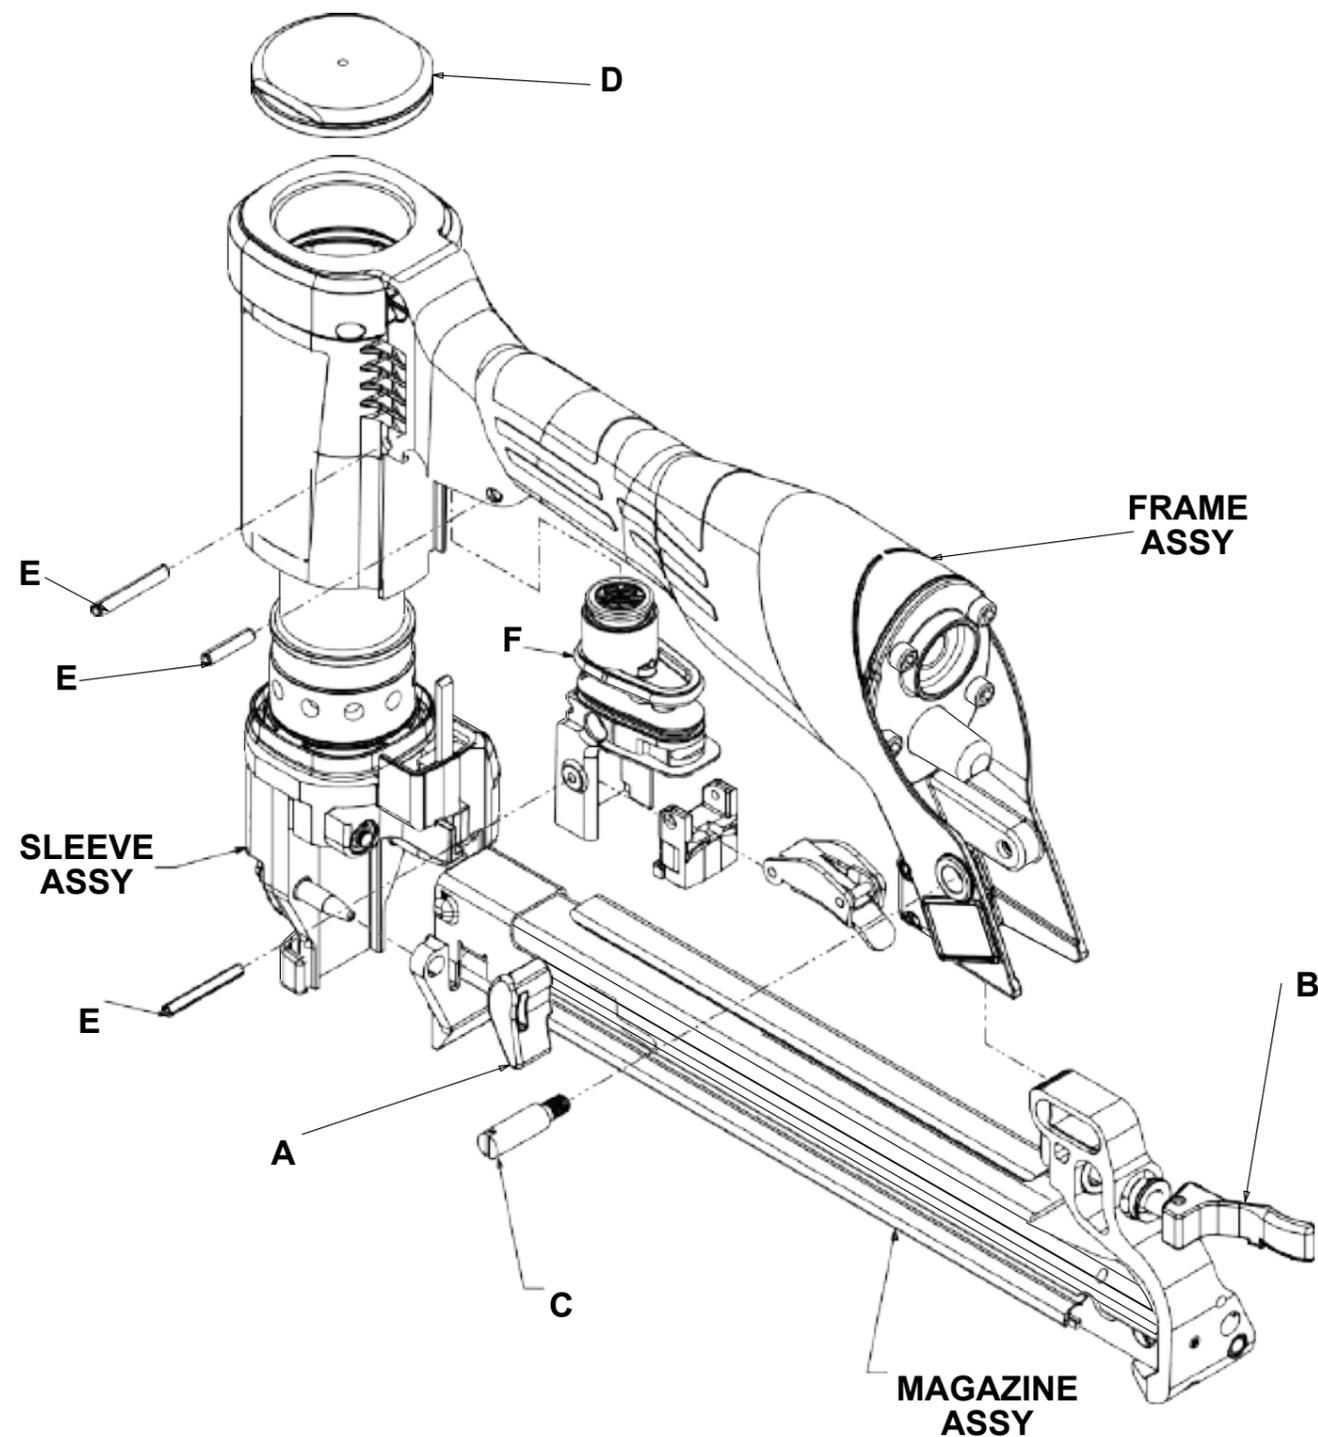

1. Disconnect the air line from the tool. Remove all staples from the magazine and position the pusher(A) to the front of the magazine.
2. Unlatch the magazine by pulling the latch down, then rotate it clockwise 1/4 turn (B). (see figure 1- 4)
3. Remove the magazine mounting pin (C). Remove magazine assembly.
4. Unscrew the cylinder cap (D) using a bench vise or a sleeve cap wrench (a bench vise or a sleeve cap wrench not supplied).
5. Remove the frame assembly from the sleeve assembly. (*careful not to damage the sleeve threads.*)
6. Using 3mm and 4mm Pin Punches and a light hammer, gently tap out the spring pins (E) holding both the trigger valve and trigger assembly.
7. Remove the trigger valve assembly (F) and discard. NOTE: If the valve assembly is stuck in frame, pry the valve out with a flat blade screw driver.
8. Lightly grease the valve housing o-ring and frame valve pocket with the grease provided. Install the new valve assembly in the frame aligning the valve spring pin grooves with the frame holes.
9. Reassemble the trigger assembly and install all three spring pins.
10. Test tool for operation according to instructions in Operations Manual for the specific model of tool and check for leakage.

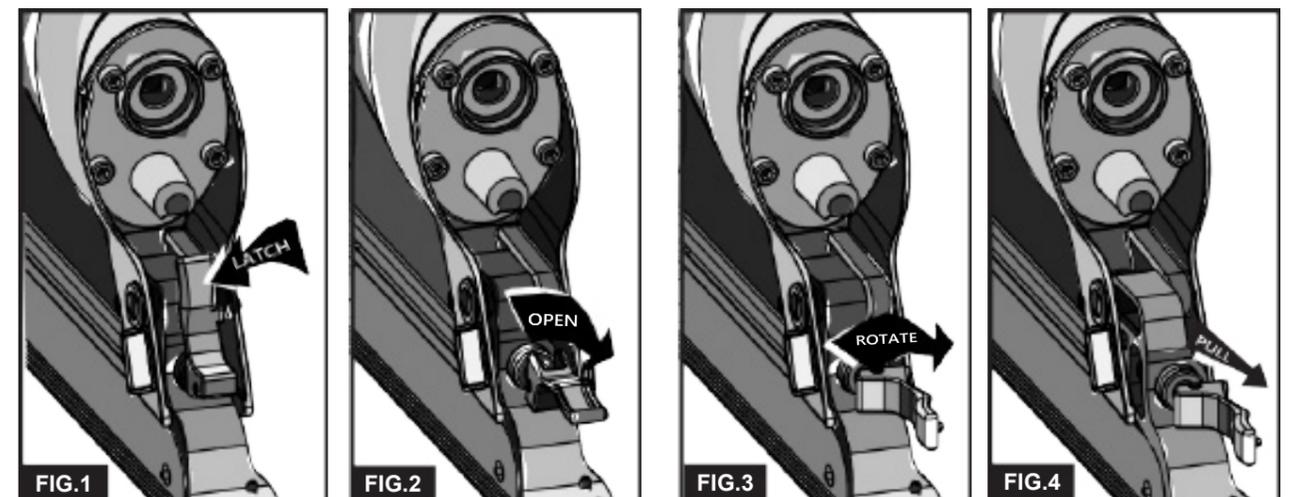

REMOTE MODULE ASSEMBLY KIT

ETVA12-RF

FOR MODELS:
 EVERWIN SN41S2, SN41S2-R,
 SN412S2, SN41S4, SN41S5 /
 Bostitch 438S2, 438S2R, 438S4
 438S5, 450S2, 538S214, 538S4
 538S5 / DeWALT DW450S2



PARTS INCLUDED IN THIS KIT:

- (1)- Remote Module Assembly
- (1)-4mm Spring Pin
- (1)- Lubricant

ADDITIONAL TOOLS NEEDED
 FOR KIT INSTALLATION:
 Light Hammer
 Clean Dry Rag

SAFETY INSTRUCTIONS

⚠ WARNING:

EYE PROTECTION which conforms to ANSI specifications and provides protection against flying particles both from the FRONT and SIDE should ALWAYS be worn by the operator and others in the work area when connecting to air supply, loading, operating or servicing this tool. Eye protection is required to guard against flying fasteners and debris, which could cause severe eye injury.



The employer and/or user must ensure that proper eye protection is worn. Eye protection equipment must conform to the requirements of the American National Standards Institute, ANSI Z87.1 and provide both frontal and side protection. NOTE: Non-side shielded spectacles and face shields alone do not provide adequate protection.

⚠ WARNING:


Always disconnect air supply: 1.) Before making adjustments; 2.) When servicing the tool; 3.) When clearing a jam; 4.) When tool is not in use; 5.) When moving to a different work area, as accidental actuation may occur, possibly causing injury.

⚠ WARNING:

Do not use gasoline or similar highly flammable liquids to clean the nailer. Vapor in the nailer could be ignited by a spark causing the tool to explode.

⚠ WARNING:

When working on air tools, note the warnings and cautions in this guide and in the Operation and Maintenance Manual covering the specific tool. USE EXTRA CARE WHEN EVALUATING PROBLEMTOOLS.

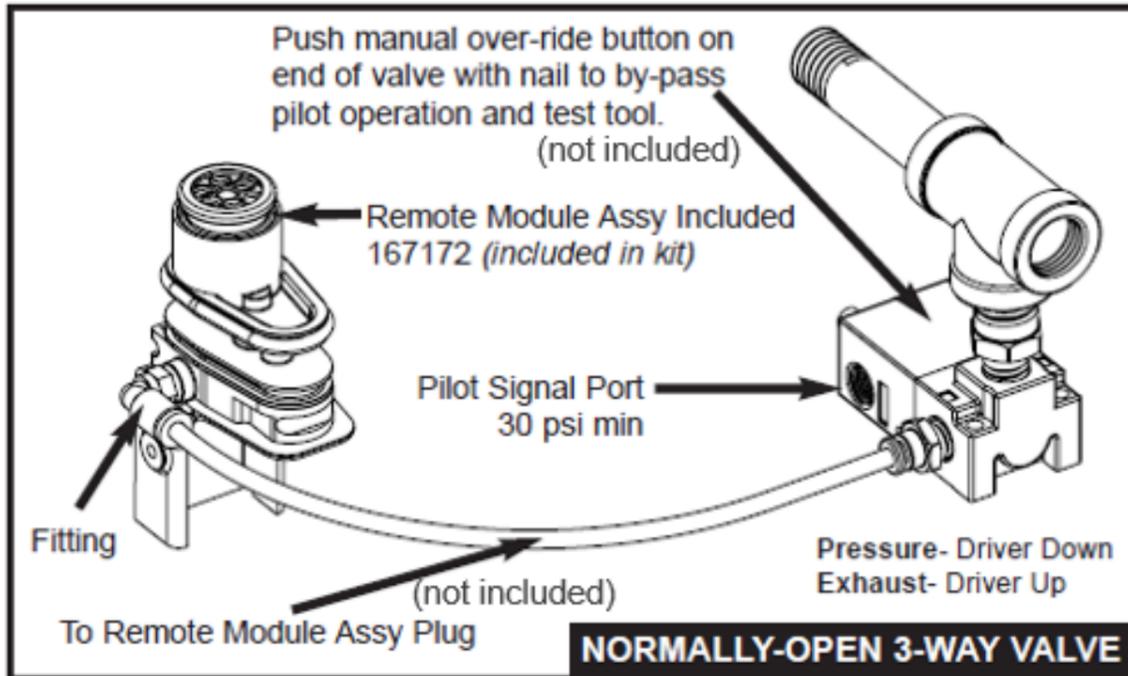

A 3-way normally open pilot operated valve is not included with this ETVA12-RF kit. Other electrical operated valves may be ordered separately as follows:

MAC® ORDERING DATA:


- 35A-BOO-DAAA-1BA..... 120V/60Hz, 18" leads, Manual Operator, Grommet Connection
- 35A-BOO-DDAA-1BA..... 24VDC (4.2w), 18" leads, Manual Operator, Grommet Connection
- 35A-BOO-DDBA-1BA..... 12VDC (4.2w), 18" leads, Manual Operator, Grommet Connection

CAUTION: WHEN THE ETVA12-RF KIT IS USED WITH ANY EVERWIN TOOL, THE CYCLING FUNCTION AND TIMING IS COMPLETELY CONTROLLED BY THE DURATION OF THE PULSE SIGNAL. INSUFFICIENT SIGNAL DURATION MAY CAUSE SKIPPING OR JAMMING OF FASTENERS. A LONG SIGNAL PULSE WILL CAUSE THE DRIVER TO STAY DOWN LONGER THAN NECESSARY AND MAY DAMAGE YOUR WORKPIECE. PLEASE CONSULT YOUR EVERWIN REPRESENTATIVE FOR YOUR APPLICATION.

STANDARD MODULE KIT ETVA12 INSTALLATION INSTRUCTIONS FOR MODELS:

EVERWIN SN41S2, SN41S2-R, SN412S2, SN41S4, SN41S5, SN41P, SN41GSW, SN41GSI

Bostitch 438S2, 438S2R, 438S4, 438S5, 450S2, 538S214, 538S4, 538S5 DeWALT DW450S2

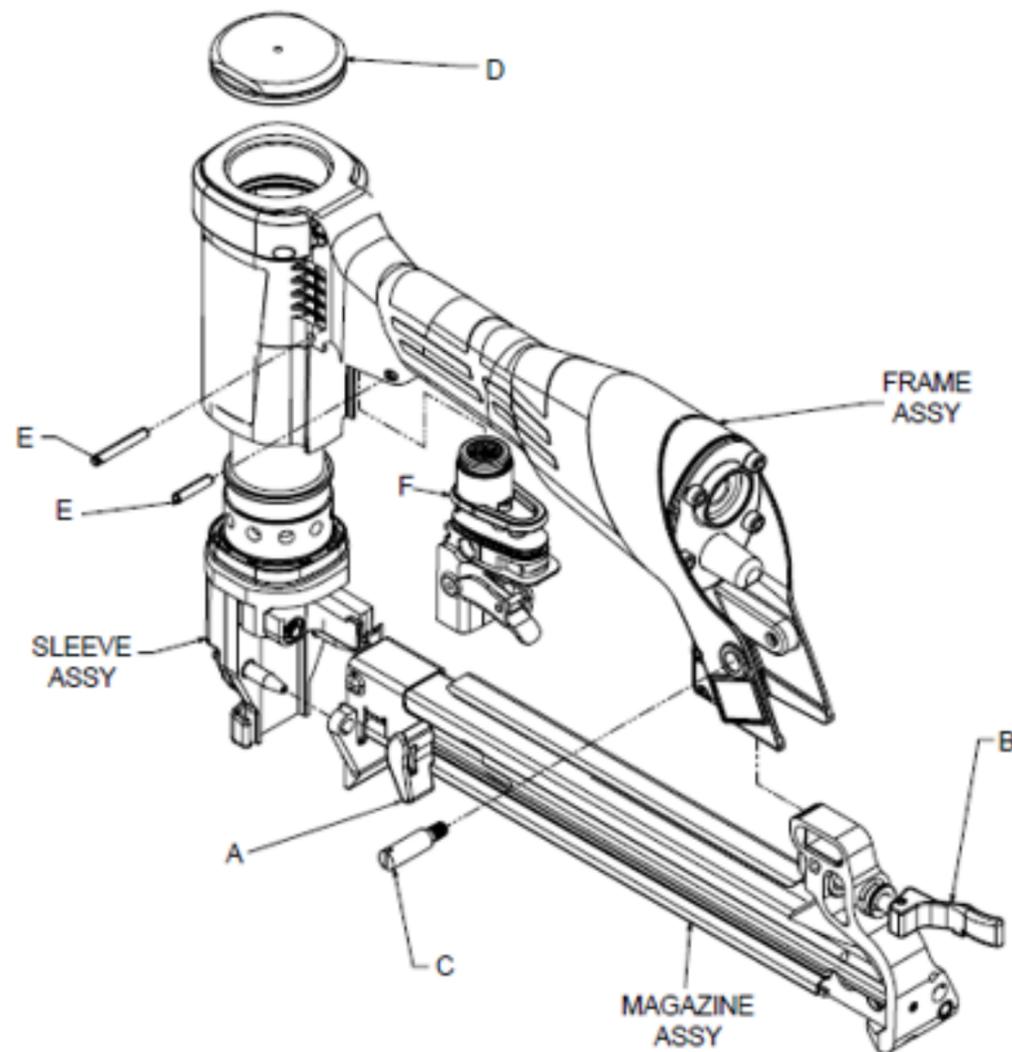

1. Disconnect the air line from the tool. Remove all staples from the magazine and position the pusher(A) to the front of the magazine.
2. Unlatch the magazine by pulling the latch down, then rotate it clockwise 1/4 turn (B). (see figure 1- 4)
3. Remove the magazine mounting pin (C). Remove magazine assembly.
4. Unscrew the cylinder cap (D) using a bench vise or a sleeve cap wrench (a bench vise or a sleeve cap wrench not supplied).
5. Remove the frame assembly from the sleeve assembly. *(careful not to damage the sleeve threads.)*
6. Using 4mm Pin Punches and a light hammer, gently tap out the spring pins (E) holding the trigger valve assembly.
7. Remove the trigger valve assembly (F) and discard. NOTE: If the valve assembly is stuck in frame, pry the valve out with a flat blade screw driver.
8. Lightly grease the valve housing o-ring and frame valve pocket with the grease provided. Install the new valve assembly in the frame aligning the valve spring pin grooves with the frame holes.
9. Push 5/32" plastic pneumatic tube into the remote-module assy fitting. Attach the other end to the normally open 3-way valve. For optimal performance keep tubing length minimal. The tool's driver will cycle downward when air pressure is applied and will return when air pressure is removed. The signal pulse pressure should be return 30 psi min. (See Fig. 5)

